



## Yamaha FZ-1 Installation Instructions

(Slip-on)

Thank you for selecting and purchasing a TiForce exhaust system for your Yamaha FZ-1. TiForce is the world's finest titanium exhaust system available today. To reduce installation time, please read and review these instructions before beginning the installation process. Instructions are also available in Adobe Acrobat PDF format on the TiForce website ([www.TiForce.com](http://www.TiForce.com)).

### Before Installation:

- Verify that all parts and accessories have been included (see list below).
- Coat all exhaust pipe mating joints with anti-seize compound / lubricant (Finish Line Ti-Prep packet included).
- Read and review these instructions, cautions, diagrams and images prior to starting any work.

- 
1. Loosen the clamp where the stock tailpipe connects to the stock collector.
  2. Remove the bolt holding the stock muffler assembly to the footpeg/exhaust bracket.
  3. Remove the stock tailpipe and exhaust assembly as one piece.
  4. Remove the nut securing the right side center stand support bolt. Install the new supplied bracket as shown in (See figure 1)
  5. Remove the right rear footpeg assembly complete, bolt the new footpeg mounting bracket in place of the stock one using supplied bolts.
  6. Carefully unbolt the footpeg from the bracket (Be careful there are springs and washers that will fall out if you are not careful), bolt the footpeg into the new billet footpeg bracket. Bolt the footpeg bracket to the footpeg-mounting bracket. (See figure 2)
  7. Remove the stock exhaust gasket from the stock tailpipe and install the gasket into the new tailpipe.
  8. Slide the supplied clamp over the new tailpipe and slide the new tailpipe onto the stock collector.
  9. Slide the TiForce end can into place. Loosely attach the two rubber bands, stainless steel bands K, and stayarm / hanger G to the end can using the supplied 6mm hardware H. See figure 4.
  10. Place the bands approximately **150mm** from the edge of the end can. See figure 5.
  11. Using the stock provided mounting point on the passenger footpeg, and using the stock mounting bolt, mount the end can loosely, allowing for some adjustment. Insert the stock mounting bolt through the stay / hanger G.
  12. Attach the supplied springs to connect the tailpipe and muffler assembly.
  13. Make sure the exhaust system is free and clear, if necessary jiggle the system to adjust for proper clearance.
  14. Carefully align the two stainless bands K so that they are parallel to each other, and spaced properly on the can (figure 5), then tighten the 6mm hardware H and the stock mounting bolt hardware. Make sure that the rubber pads fully cover the band(s). **USE CAUTION WHEN TIGHTENING THE 6MM HARDWARE AND THE TWO BANDS SO AS NOT TO CRUSH OR DISTORT THE SLEEVE OF THE CAN.**
  15. Tighten the supplied clamp to secure the new tailpipe to the factory collector.
  16. Using some brake and contact cleaner on a clean rag, carefully wipe down the entire exhaust system to remove any residual oils, anti seize, fingerprints and dirt prior to starting the motor. **FAILURE TO CLEAN THE TUBING AND CAN MAY RESULT IN PERMANENT STAINING OF THE SYSTEM WHEN HEATED.**
  17. Check that all hardware is tightened, then start the motor and check for exhaust leaks.



---

**General Cautions For Exhaust System Installations:**

- **CAUTION** - For your safety, carefully read these instructions and those above, and fully familiarize yourself with the content before beginning installation and use. Keep these instructions in a safe place for future reference. Install the exhaust system as explained in these instructions.
- **DANGER** – when the motor is running, and shortly after it has been turned off, the motorcycle, the exhaust system and end-can will be hot. Severe burns, bodily injury and even death may result.
- **DANGER** - Keep gasoline and other flammable materials away from the exhaust system at all times. Exposure of gasoline and to heat can lead to fire.
- **CAUTION** - Stop the motorcycle if the exhaust system comes in contact with people or animals. Never touch the exhaust system when hot. Direct contact with the system can cause burns.
- **DANGER** - Allow the motor to cool before installing or removing the exhaust system. Working with a hot motor can lead to burns.
- **CAUTION** - Stand the motorcycle on a flat and level surface and ensure that the motorcycle is stable before installing the exhaust system. Bodily injury and / or death could result to you or others if the motorcycle falls over. Damage may also result to the motorcycle or nearby property or equipment.
- **DANGER** - Start and run the motorcycle in a well-ventilated area. With prolonged exposure to exhaust gas you run the risk of severe oxygen deficiencies, bodily injury or death may result.
- **CAUTION** – Install the muffler only on the specified model of motorcycle. Improper installation will lead to loss of performance and or damage to the motorcycle.
- **CAUTION** – Do not disassemble, modify or remodel this exhaust system.

---

TiForce high performance exhaust systems are distributed exclusively by Orient Express Powersports. Please have your dealer contact Orient Express for technical assistance, information, and parts if needed.

TiForce / Orient Express  
81 Hanse Ave  
Freeport, NY 11520

800.645.6521  
516.546.5232 tel  
516.546.5247 fax

[www.orientexpress.com](http://www.orientexpress.com)  
[www.tiforce.com](http://www.tiforce.com)  
[sales@tiforce.com](mailto:sales@tiforce.com)

**PARTS LIST (Yamaha FZ-1)**

- Tail pipe – 1x
- End can – 1x
- Clamp Assembly – 1x
- Stainless steel band K – 2x
- Rubber pad – 2x
- M6 x 20mm Allen bolt H – 2x
- M6 nut – 2x
- M6 washer – 4x
- Hanger/ Stay Arm G – 1x
- Exhaust spring – 2x
- Spacer A (19mm x 25mm) – 2x
- Spacer B (45mm x 25mm)– 1x
- Footpeg/Exhaust bracket stay C– 1x
- Footpeg bracket D– 1x
- Center stand Tab E – 1x
- M8 x 75mm Allen bolt – 1x
- M8 x 45mm Allen bolt – 2x
- M8x 25mm Allen bolt – 2x
- M8 washer – 5x
- M8 Nut – 1x
- Finish Line TiPrep Anti-Seize – 1 packet

Figure 1



Figure 2



Figure 4

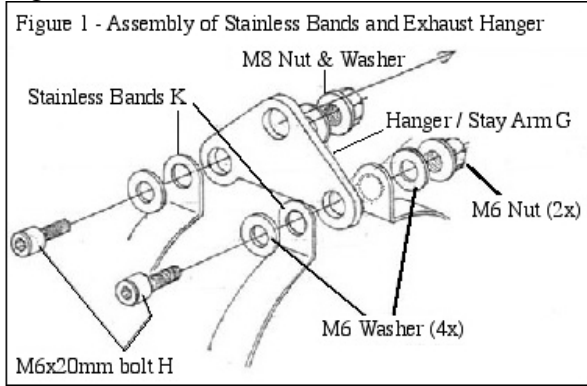


Figure 5

